SAMSUNG

RADIO CASSETTE RECORDER
CD PLAYER
RCD-M70

SERVICE Manual

RADIO CASSETTE RECORDER CD PLAYER

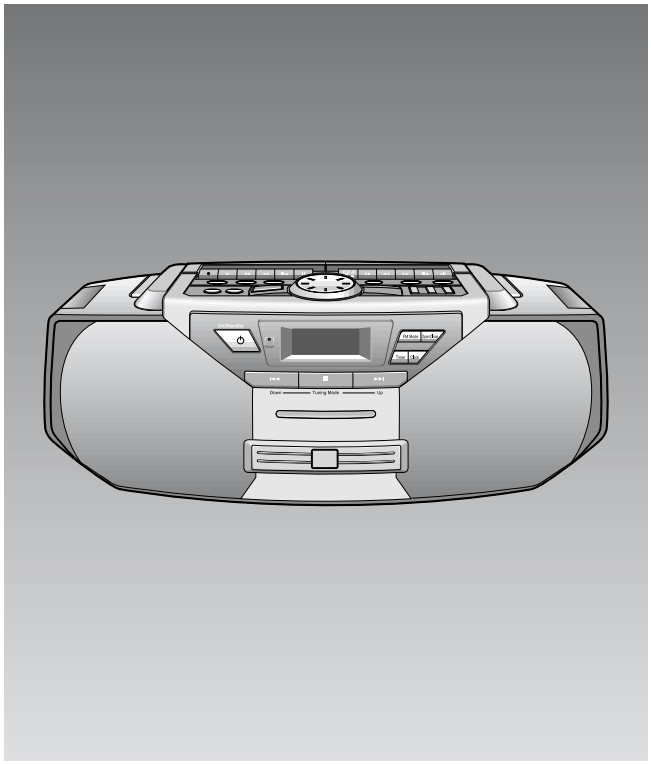

CONTENTS

1. Alignment and Adjustments
2. Disassembly and Reassembly
3. Exploded Views and Parts List
4. Electrical Parts List
5. Block Diagrams
6. PCB Diagrams
7. Wiring Diagram
8. Schematic Diagrams

© Samsung Electronics Co.,Ltd. JAN 2001
Printed in Korea
Code no. AH68-20202L